


# User Manual: HMI Touchscreen Controller


## Human Machine Interface—Desktop Remote Touchscreen\*

### MAIN MENU & ALL LANE CONTROL

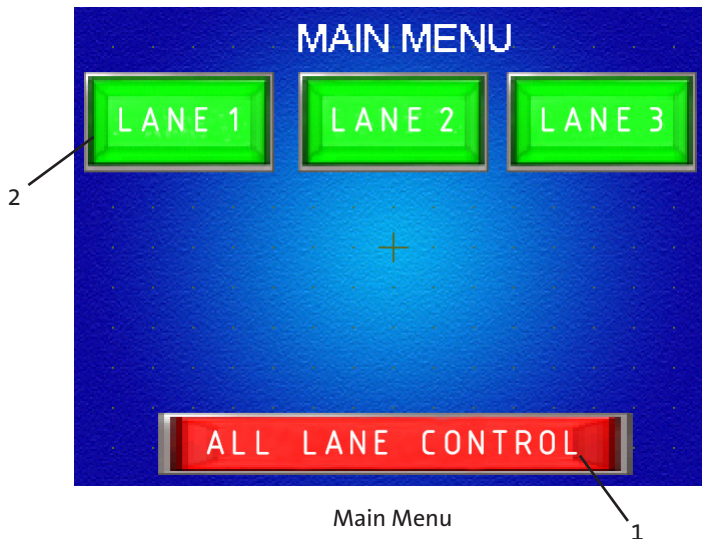

#### Main Menu

Upon touching anywhere on the Gunnebo startup screen to begin, the Main Menu will appear. From this screen, you can choose to oversee all lanes at once (1) or individual lanes (2). *If lockout has been activated, use code 32835 to reach the Main Menu.*

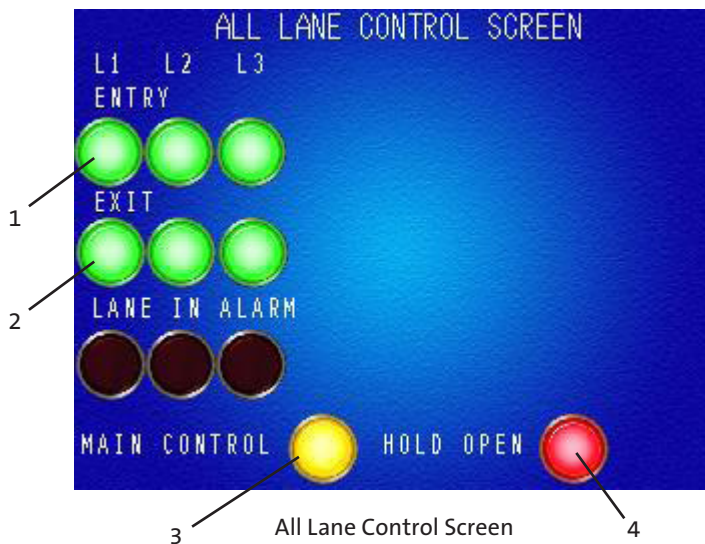

#### All Lane Control

Use this function to easily oversee all lanes at a glance.

1. Grant entry for one or more lanes—*Press once for each entry in lane of passage.*
2. Grant exit for one or more lanes—*Press once for each exit in lane of passage.*
3. Return to Main Menu—*See screen above left.*
4. Hold all lanes open—*Can be used in case of emergency evacuation, or if all lanes require free access at once. Ensure no one is standing in the lanes when activating the Hold Open function.*

\*For more detailed instruction, see *Operational Manual*  
For Technical Support, call 513-666-4886

# User Manual: HMI Touchscreen Controller

## Human Machine Interface—Desktop Remote Touchscreen\*

### INDIVIDUAL LANE CONTROL & CONFIGURATION



Lane 1 Menu



Lane 1 Operation Menu

### Individual Lane Menu

From the Main Menu, select the lane you wish to oversee. This brings you to the Lane Menu. From here you can choose from the following screens:

1. Control—Brings up the Lane Operation Menu screen.
2. Counts—View passage data. See next page.
3. Inputs/Outputs—See Operational Manual.
4. Return to Main Menu

### Lane Operation Menu


1. Entry Only—No exit.
2. Exit Only—No entry.
3. Free Exit—Card in, free exit.
4. Barrier Mode—Toggle between the 2 modes of operation.
5. Popout Mode—Barriers are retracted until invalid entry.
6. Lane Closed—No entry or exit.
7. Lane Activated —When highlighted, lane is ready for use.
8. Grant Entry—Allows 1 entry per selection.
9. Arm Reset—Alarms silenced, lanes reset.
10. Grant Exit—Allows 1 exit per selection.
11. Main—Return to Main Menu.
12. Counts—Goes to Lane Counts screen. See next page.

\*For more detailed instruction, see *Operational Manual*  
For Technical Support, call 513-666-4886

# User Manual: HMI Touchscreen Controller

## Human Machine Interface—Desktop Remote Touchscreen\*

### LOCK/UNLOCK & RESET LANE COUNTS

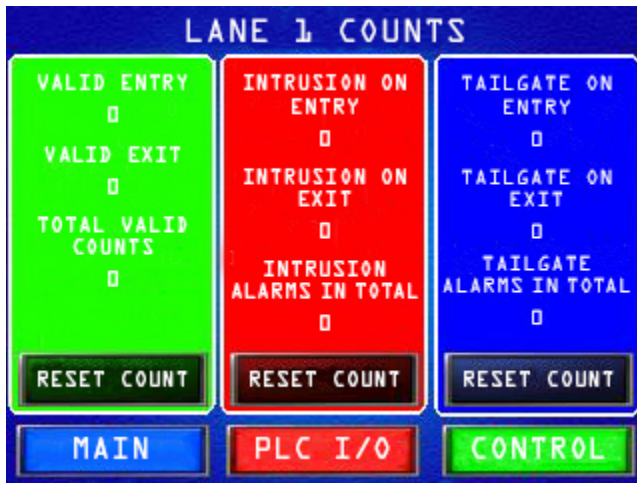

Lane 1 Counts Screen

### Lane Counts

The Lane Count screen can be reached from the Lane Menu. From here you can retrieve data on valid and invalid entries and exits, and can reset the count if desired.

### Lockout Mode / Logging In and Out

The HMI can set switched to Lockout Mode at any time by pressing the upper right hand corner of the Main Menu screen. This will bring you to a logout screen. Enter **32835** to log out and set the HMI to Lockout Mode. Enter **32835** to log back in and exit Lockout Mode.

*For further information, please contact:*

Gunnebo Entrance Control Inc.

535 Getty Ct., Benicia, CA 94510

Tel: 513-666-4821

Email: [info@gunnebo.us](mailto:info@gunnebo.us)

[www.gunneboentrancesecurity.com](http://www.gunneboentrancesecurity.com)

Note: In pursuit of its policy of continuous refinement and improvement, Gunnebo Entrance Control reserves the right to modify design and details at any time and without notice.

\*For more detailed instruction, see *Operational Manual*  
For Technical Support, call 513-666-4886



**GUNNEBO®**  
For a safer world